





# Roadie Instructions

Part #1016,1017, 1018

- 1** To maximize the stroke length and efficiency, lock the alloy barrel into the pump handle.

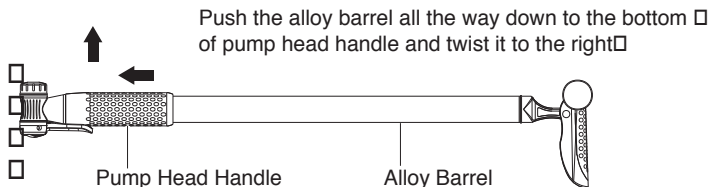

- 2** Choose the correct valve.

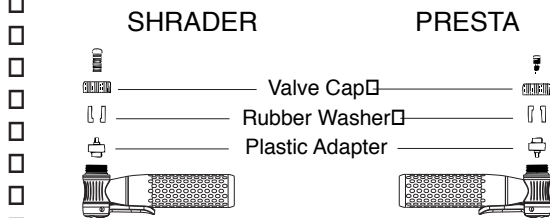

- 3** Put the pump head onto the tire valve. Lock the lever. Inflate.



- 4** Unlock the alloy barrel and pump handle and mount the pump into the frame.